



HANDLE TRIMS

CLR4

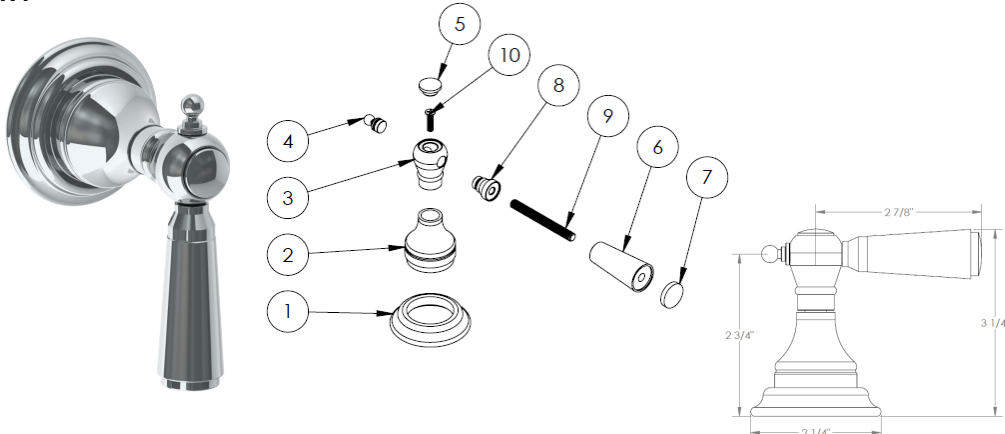


ITEM NO.	PART NUMBER	QTY.
1	CLR-ESC-ESC-RING	1
2	CLR-ESC	1
3	I-POST	1
4	CLR-POST-PEG	1
5	A-POST-CAP	1
6	BB6-LVR-INSRT	1
7	H4-LVR-END	1
8	S3-POST-INSRT	1
9	.25-20x2.375-THRD-ROD	1
10	CR-FHM1 0.164-32x0.625x0.625-S	1

CLR5

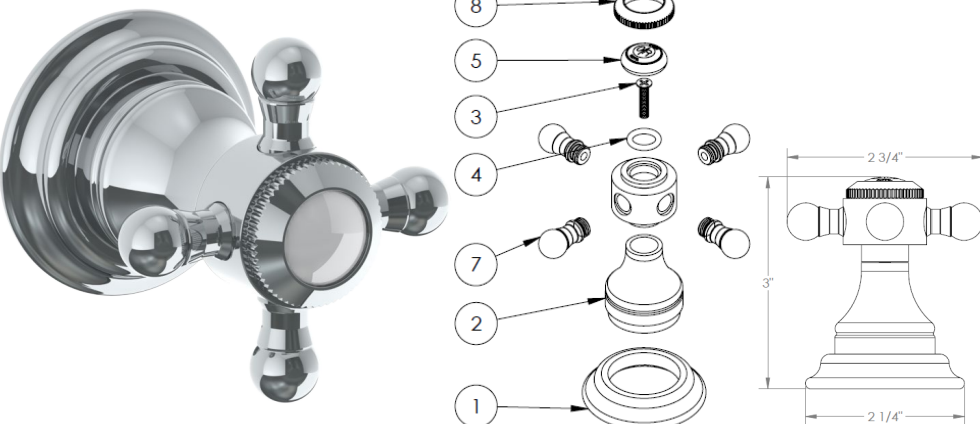

ITEM NO.	PART NUMBER	QTY.
1	CLR-ESC-ESC-RING	1
2	CLR-ESC	1
3	CR-FHM1 0.164-32x0.75x0.75-S	1
4	AS568 - 111	1
5	PRCLN-BUTTON-ORW	1
6	X-POST	1
7	X-ARM	4
8	X-CAP-RING	1

CLR6

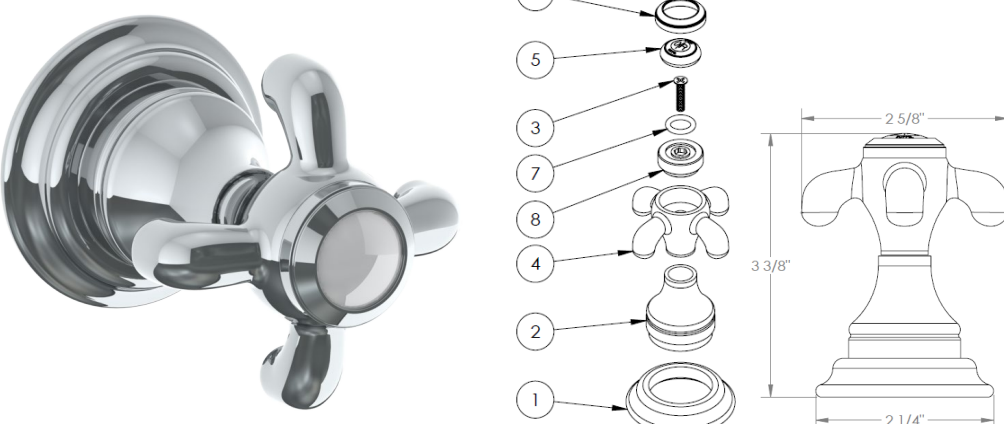

ITEM NO.	PART NUMBER	QTY.
1	CLR-ESC-ESC-RING	1
2	CLR-ESC	1
3	CR-FHM1 0.164-32x0.75x0.75-S	1
4	CLR6-CRSS-HNDL	1
5	PRCLN-BUTTON-ORW	1
6	MR4-CAP-RING	1
7	AS568 - 111	1
8	S1-CAP-ADAP	1

Specification from Finished Wall to Tip of Broach Stem

HANDLE TRIM #	MEASUREMENT (IN.)
CLR4	2 3/8
CLR5	2 1/4
CLR6	2 3/8

Note: When fitting handle it may be necessary to shorten broach stem and/or threaded nipple to eliminate gap between handle and escutcheon

IMPORTANT INSTALLATION INFORMATION

- USE TEFLON TAPE OR PIPE SEALANT FOR THREADED CONNECTIONS
- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS
This will cause the finish to tarnish and void the warranty. A non-corrosive Alkoxy Silicone is recommended.
- DURING SWEATING OF LINES DO NOT OVERHEAT CASTING
Overheating may cause damage to internal mechanism
- COPPER ADAPTORS MAY BE REQUIRED TO COMPLETE YOUR INSTALLATION

For technical support, please call 718-257-2800